



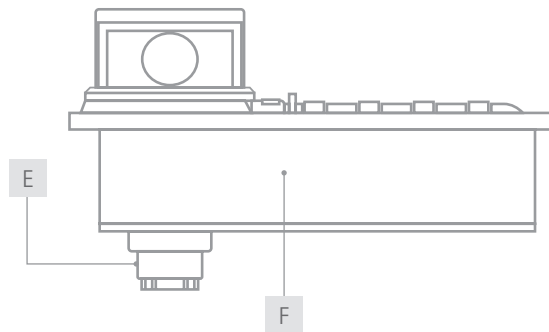

sPinLock700

Operating Manual

sPinLock700¹

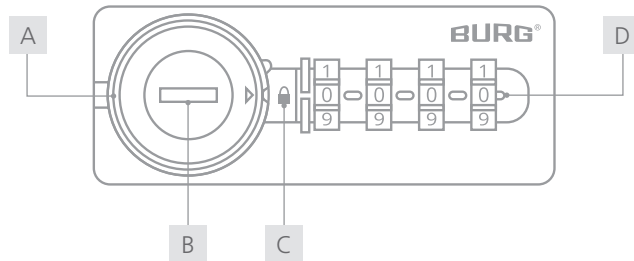

- | | |
|---------------|--------------------|
| A knob | B Schlüsselöffnung |
| C lock symbol | D guide line |
| E stator | F housing |

Content

General.....	2
Technical data.....	3
Scope of delivery.....	3
Optional accessories.....	3
Features.....	3
Mounting dimensions.....	3
Product dimensions.....	4
Functional description.....	4
Operation.....	5
Guarantee and warranty.....	6
Contact.....	6

General

The latest version of this guide is available at:
www.burg.de

Important notes:

- Please observe all important notes and read the entire operating manual before starting the configuration.
- From October 2025, transition to version 1.1

¹ Primary representations in the manual: Left closing, door hinge: DIN right
sPinLock700 | 10-25

Factsheet

Front view



Back view



Technical Data


Dimension	85,5 mm x 33 mm x 49,8 mm
Material	Housing: plastic Stator: zamak
Mode	Multi-user mode
Number wheels	4
Code combinations	9,999
Locking direction	Left (180°), door hinge: DIN right Right (180°), door hinge: DIN left LAD / drawer (180°); vertical-top
Mounting hole	Wood: 29,6 mm x 81,6 mm Steel: 25,1 mm x 77,1 mm
Lock attachment	Mounting frame (1x)
Max. door thickness	Wood: 16 mm bis 22 mm Steel: 0,5 mm bis 2,5 mm
Cam type	B
Code (default)	0-0-0-0

Features


- automatic user code scrambling (prevents reading)
- simple installation and operation
- master key for emergency opening
- 9,999 possible code combinations
- variants for three different installation situations (left, right and drawer)
- clearly defined stop positions for the dials
- slim design even for difficult installation space situations

Mounting Dimensions

Wood

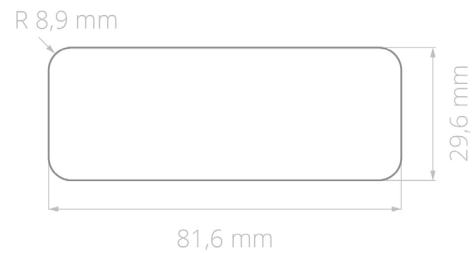

Steel

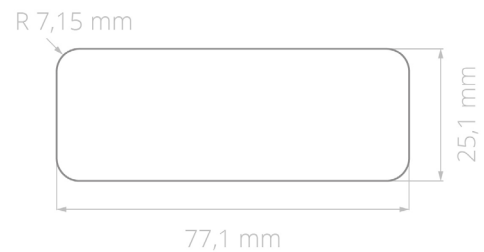

Scope of Delivery

- 1x locking system
- 1x cam fixing screw (M4 x 8mm, serrated) with washer
- 1x mounting frame
- 2x fixing screw, mounting frame (M3 x 16 mm)

Optional Accessories

- master key


To the video:
operation




Product Dimensions

1 Left closing, door hinge: DIN right

Front view

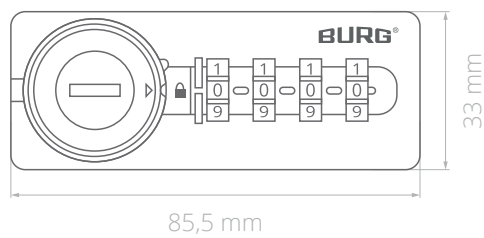


Top view

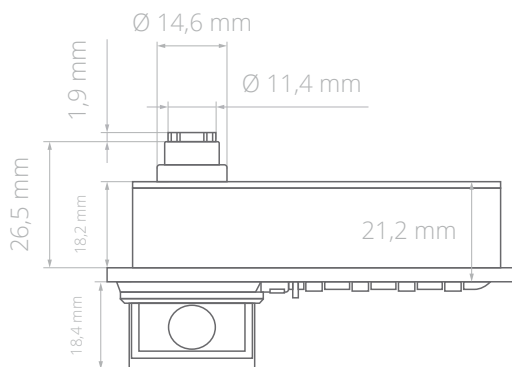


2 Right closing, door hinge: DIN left

Front view

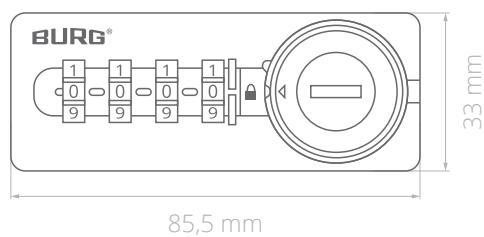


Top view

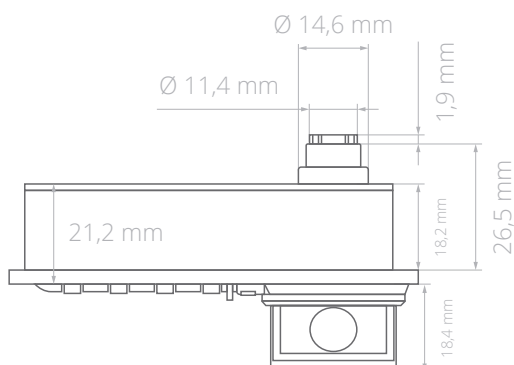


3 LAD / drawer, vertical-top

Front view

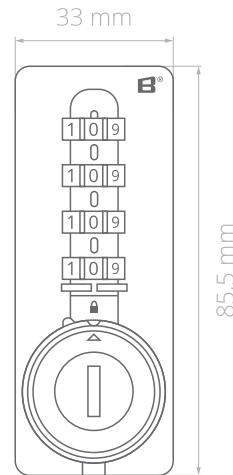

Side view

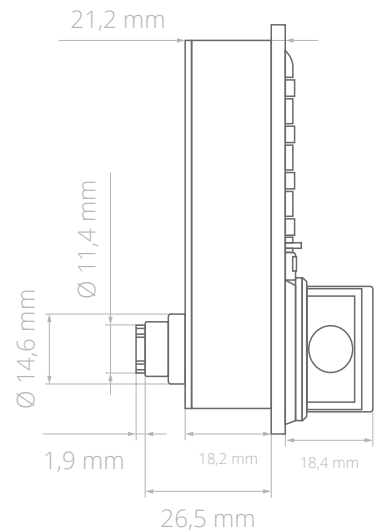

Functional Description

Mode: multi-user authorization (multi-user mode)

This mode is suitable for changing user groups where the locker is only used temporarily or once, e.g. in a sports facility. The lock is locked by setting the desired code. The code used for locking remains valid until the lock is opened again with the same code.

Master key

The lock can be opened using the master key. The code is reset to the default setting 0-0-0-0.

Note: The master key is not included in the scope of delivery. If required, the master key can be ordered separately.

Automatic user code scrambling

The dials automatically return to the 0-0-0-0 setting after a successful locking process. They do not need to be turned manually.

Operation

1 Lock

Before closing, make sure the correct code is set.

1. Arrow points to the green lock symbol: Close the door and set the selected code using the number wheels.
2. Turn the knob to the closed position (arrow points to the red lock symbol). The number wheels automatically return to the setting 0-0-0-0.


2 Unlock

1. Set the code used for locking via the number wheels.
2. Turn the knob to the open position (arrow points to the green lock symbol). The dials automatically return to the setting 0-0-0-0. Pull the door open.


Please ensure that the automatic user code scrambling function has successfully jumped to the output code 0-0-0-0.

3 Unlock with master key


1. Insert the master key into the key opening.

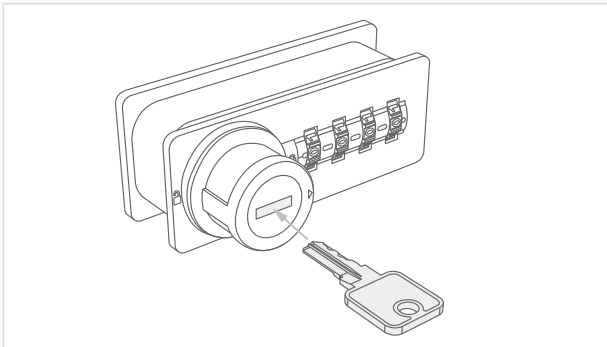


2. Hold the knob. Turn the master key clockwise as far as possible.

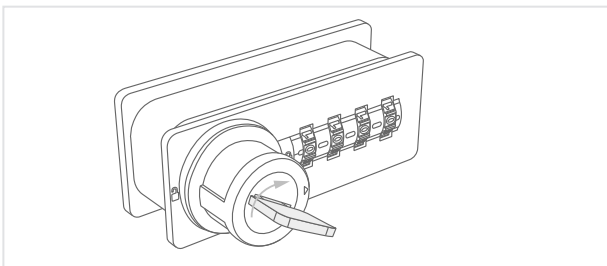


3. Turn the knob clockwise to the white mark until it can no longer be moved.

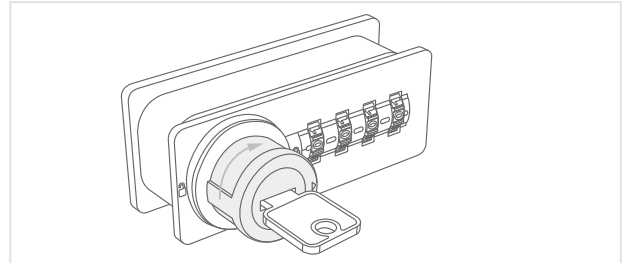


4. Hold the knob. Turn the master key counterclockwise until it can no longer be moved. **Hold the knob and master key in this position.**

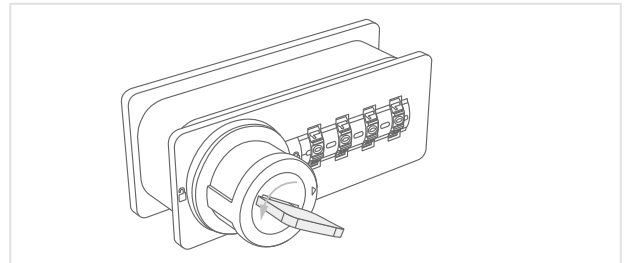

5. Start with the number wheel next to the knob. Carefully turn the number wheel four times fully (e.g. from 0 to 0). Repeat the process for the other number wheels.

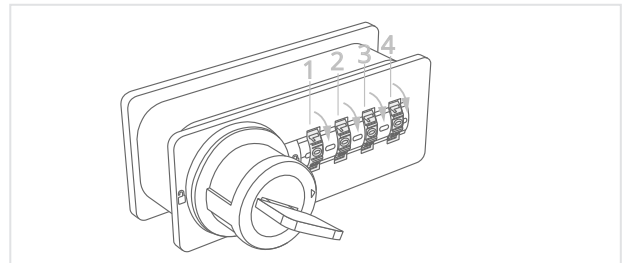

6. Turn the knob clockwise to the open position (arrow points to the green lock symbol) and pull the door open. Remove the master key. To lock, follow step 1 under the point „Operation“.

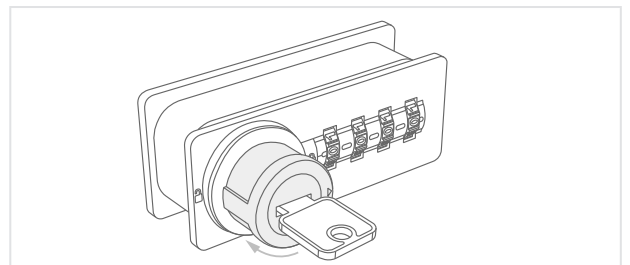

To the video:
operation



Guarantee and Warranty

The warranty is subject to the statutory provisions. If you have any questions, please contact a specialist dealer or use the contact details below. Spare parts can be found at specialist dealers or at: www.burg.shop

Contact

BURG Lüling GmbH & Co. KG

Volmarsteiner Str. 52
58089 Hagen (Germany)
+49(0)23 35 63 08-0
info@burg.de
www.burg.de